

Speakeasy Vintage Music

Vintage Tube Preamp

G2



Speakeasy Vintage Music, Inc.
3250 Schoolhouse Road
Dover, PA 17315
717-292-0814

<http://www.speakeasyvintagemusic.com>

Specifications subject to change without prior notice or liability.
All Trademarks are the property of their respective owners.



OWNERS MANUAL

INTRODUCTION

Congratulations on choosing the Speakeasy Vintage Music Vintage Tube Preamp. We recommend that you take a moment and read this manual as it provides information that will help you in using this unit to its fullest potential.

FRONT PANEL DESCRIPTION

Channel A descriptions are identical to Channel B if so equipped.

INPUT

Standard unbalanced 1/4" input jack, connect to your synthesizer's "mono" output. Set your keyboard's output level to between 75% and 100%.

VOLUME

The Volume knob controls the overall preamp drive level; you generally want to keep this control between 50% and 75% also. When using the preamp for the first time, start with this control at "0" and once the unit is on and warmed up, advance the control slowly until you get a feel for where the volume best suits your system.

TREBLE

The Treble knob controls the relative volume of the higher frequencies. Start with this control set around 50%.

BASS

The Bass knob controls the relative volume of the lower frequencies. Start with this control set around 50%.

HIGH / LOW GAIN Switch

This switch toggles an additional gain stage in and out of the audio path. Use the High Gain position, unless undesired distortion is present.

REAR PANEL DESCRIPTION

OUTPUT (A/B)

Standard unbalanced 1/4" line out jack. Connect to your audio amplifier's input.

GAIN (A/B)

Sets the preamps overall output level. You want to keep this level as high as possible to have the best signal to noise ratio. If you are experiencing hum or noise, try turning this control up and your amplifier's input level down. If the preamp is overdriving your amplifier, lower this control until the distortion disappears.

SPEED (OPTIONAL)

1/4" jack used to connect a standard footswitch with a 1/4" plug. Units with the Stop option will require a dual footswitch was a stereo 1/4" plug.

"PIG TAIL" CONNECTOR (OPTIONAL)

If your preamp was ordered with a Leslie[™] option a special circular connector will appear on the rear panel. Compare its label with the chart below to determine which "Family" of tone cabinets your preamp is compatible with.

Pigtail Label	Compatible Leslie [™] Models
122	30A, 30C, 31A, 31H, 21H, 22H, 22R, 122, 122R, 122V, 122RV, 142, 222, 222RV, 242, and 122A.
147	31W, 44W, 46W, 25, 45, 47, 47R 125, 225, 145, 147, 147V, 147RV, 245, 247, 247RV, and 147A.
9 Pin	760, 770, 825, 900, 910, and 925.
11 Pin	122XB, 130, 315, 330, 412, 615, 715, 716, 722, 723, 740, 750, 771, 815, 820, 822, 840, 860, 912, and 914.