



CONSOLE CONNECTOR KIT SE-CCK8253

FOR USE WITH: HAMMOND Models A-100
LESLIE Speakers: 251, 351


Contents of Kit:

1 -Console Connector	1 -Tremolo Control
1 -Pigtail Cable	1 -Echo Control
2 -Screws, 8 x 1/2"	1 -Instructions
4 -Screws, 6 x 3/4" (HME)	8 -Wire Nuts
5 -Screws, 6 x 1/2", Truss Head	5 -P Clamps

To Install the Kit:

1. Attach the Echo and Tremolo controls to the wooden rail in front of the lower manual with the black oxide screws provided. Use the two mounting holes which best center the screws in the rail.
2. Remove the console dust cover, and pass the control cables into the console by one of the following method:
3. Push a small screwdriver over the felt dust seal between the lower manual and the knee panel. Push the cables through this opening into the console. From the back of the console, reach behind the tone generator and pull the cables through.
4. Pass the switch cables through the slot in the rear edge of the shelf into the lower compartment.
5. Position the console connector near the power amplifier, so that the power and control cables will reach. Install it with the wood screws provided.
6. Cut the green lead which connects the amplifier output to the main speakers. (See "A" & "B" on Fig. 1) Remove 3/8" of insulation from each of the cut ends. Connect the amplifier end of this lead to the red lead from the Echo control with a wire nut. Connect the speaker end of the lead to the green lead from the Echo control. (See "B" on Figs. 1)
7. Disconnect the reverberation input lead (green on A100) from the main speakers. (See "C" on Figs. 1) Strip and connect it to the orange lead from the Echo control with the wire nut provided.
8. Cut the "hot" lead (gray or blue) from the reverberation speaker terminal and strip both free ends about 3/8".
9. Connect the yellow Echo control lead to the "hot" reverberation speaker terminal and connect the blue Echo control lead to the other lead from Step 8.
10. (See "E" on Figs. 1)
11. Plug the Console Connector pigtail into the 5 contact socket on the rear apron of the power amplifier chassis. (See "F" on Fig. 1)
12. Connect the brown lead from the Echo control to the brown lead from the Console
13. Connector with the wire nut provided. (See "G" on Fig. 1)
14. Connect the black lead from the Echo control to the black lead from the Console
15. Connector with the wire nut provided. (See "H" on Fig. 1)
16. Connect the Gray jacketed Red/Black wire pair from the Tremolo control to the Red/Black pair on the Console Connector with the wire nuts provided. (See "I" on Fig. 1)

17. Connect the Pigtail cable to the Console Connector outlet and plug the speaker cable into the 6 contact socket end of the Pigtail cable. (See "J" on Fig. 1)
18. Adjust the speaker volume control as indicated in the manual. The installation is now complete.
19. Replace the console dust cover and back and check for proper operation.

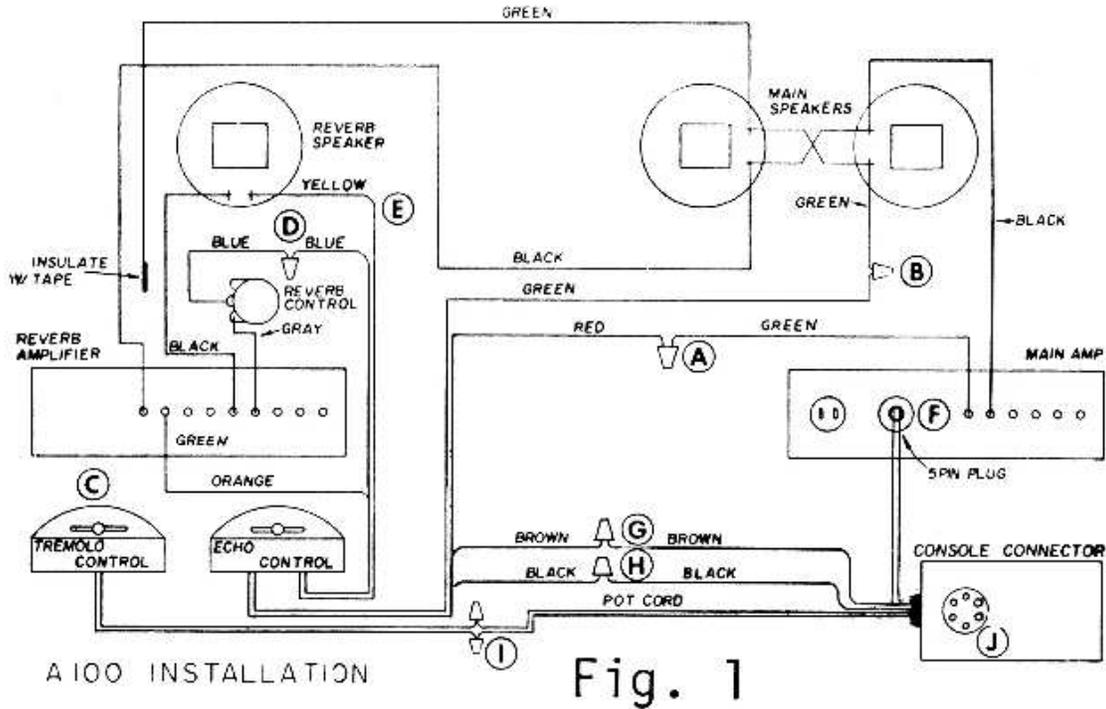

Speakeasy Vintage Music, Inc.
 3250 Schoolhouse Road
 Dover, PA 17315
 717.292.0814 - www.speakeasyvintagemusic.com

Diagrams and portions of this text originally published as P/N 034686
 by Leslie™ and downloaded from www.mitatechs.org, with no known
 copyrights in effect.