


Can be used to replace relay in 16/18 Leslie  
 Jumper D2 and R6 - remove R3 and C4  
 Change R9 to 1k 1/2 watt  
 Wire R+ and R- to 5 pin plug pins 2 and 4  
 Connect 6vac transformer to F+ and Gnd

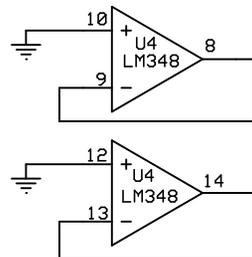

Speakeasy Vintage Music

UNIVERSAL SSR

T. Thompson

251-060326-002

3/26/2006

Page 1 of 1