


CHASSIS WIRING DIAGRAM

NOTE: DRAWING NOT TO SCALE

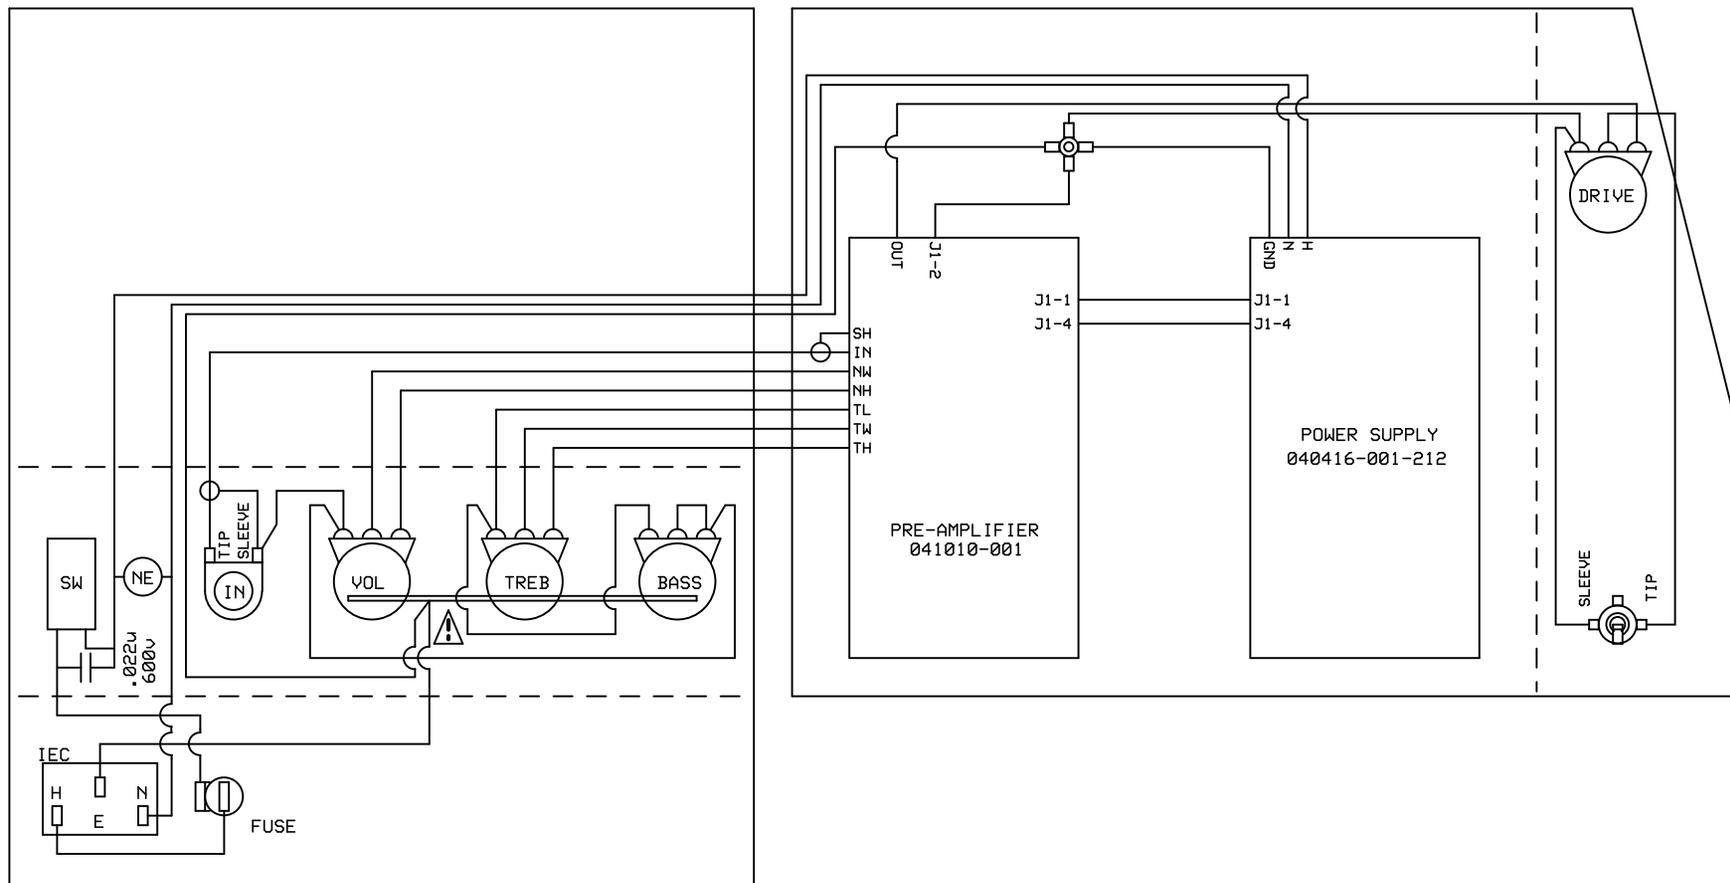

ASSEMBLY NOTES:

WIRES TO/FROM TOP PANEL POTS SHOULD BE TWISTED AND GROUPED AS ONE HARNESS
 HOT, NEUTRAL, AND EARTH GROUND SHOULD BE TWISTED AND GROUPED AS A SEPERATE HARNESS
 SHIELED INPUT LEAD SHOULD BE RUN SOLO FROM JACK TO PREAMP BOARD

⚠️ GROUND WIRES MUST OVERLAP WHEN WRAPED AND SOLDERED TO THIS BUSS

Speakeasy Vintage Music

Dyno-Mite Preamp

T. Thompson
S. Hayes

Rev 1.0
10/04/04

Page 3 of 3