



## FENDER RHODES SUITCASE BRIGHT KIT INSTRUCTIONS

### Tools Needed

- Phillips Screwdriver
- 3" Hole saw or Jig saw
- Thin screwdriver ( removing staples)
- #10 Sheet Metal screw ( for pulling back grill frame)
- Hammer ( tapping staples in )

**ATTENTION- Disconnect Power Before Proceeding!**

### PHYSICAL INSTALLATION

- Remove screws from sustain pedal plate on the player side grill cloth frame.
- Remove Velcro-held frame.
- Remove screws from rear grill cloth frame.

**Remember, wires are attached- GO SLOW when executing the next step!!**

- Pull-out the top of the Audience Side grill frame. ( #10 screws inserted into holes will give you a pull handle)
- Make a note of where each of the four wires are attached (The two black and two white wires are NOT interchangeable!) and then remove the wires.
- Remove Rhodes Name plate from the grill frame.
- Carefully remove staples from the areas where the tweeters will be mounted. You will have to go in about half way from each corner.

**When selecting a location, be sure that the rear of the new tweeters won't collide with any other internal parts (speakers, amplifier, etc.)**

- Use one tweeter as a template and mark and drill 3" holes & fastener holes.

**Mount the tweeters that have resistors on the back panel. The plain (no resistors) two go on the front panel.**

- Insert tweeters from the outside and fasten with supplied nuts, bolts and washers.

### ELECTRICAL INSTALLATION

All of the tweeters have been pre-wired and wire connectors have been provided to allow easy splicing of the new and old wires. These clips will mount to the original white & black wires. Wire White to white & black to black attaching each 12" speaker's wire pair to the closest tweeter's wire pair (see Fig. 1). Do this to each 12" speaker wire pair. This will result in each 12" speaker being connected to one tweeter.

**REASSEMBLY**

Re-stretch and staple grill cloth. Take your time and keep staples close together. Use your thumb and roll the grill cloth around the edge to get a good stretch. Keep checking the corner to be sure you have stretched the grill cloth tight enough. Tap staples in all the way with a hammer.

Re-install hardware... Rock on

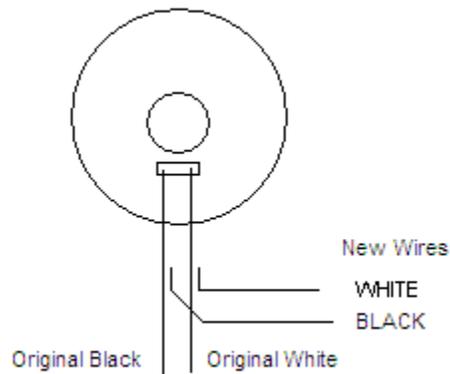


Fig. 1 - Connection Diagram