

Stage 54 Slide Pot Installation Guide

Take note of the images below. The first one is of an original Rhodes™ Stage 54 volume and tone controls. The second one is of our replacement pot.

Notice that the pins are arranged differently on the new pots. When making your connections, USE THE PIN NUMBERS AS A REFERENCE - NOT THEIR PHYSICAL LOCATION.

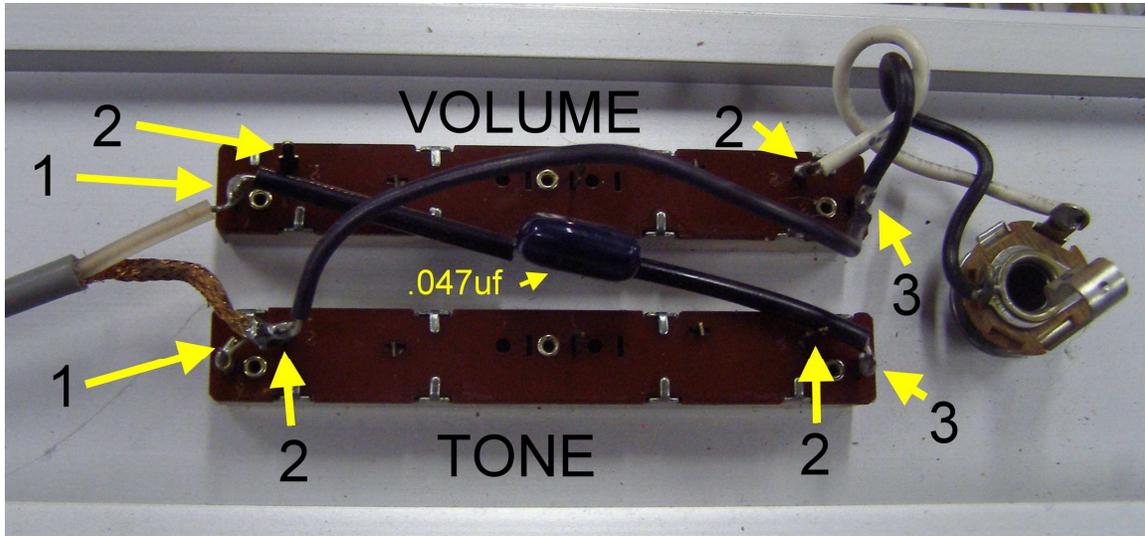


Fig. 1 - Original Wiring



Fig 2 - Replacement pot

Volume Pin 1 - Center Conductor of shielded cable from Harp & one end of the Tone Cap.

Volume Pin 2 - Tip of 1/4" Jack (both Pin 2s are electrically identical)

Volume Pin 3 - Pins 1 and 2 of TONE pot & Sleeve of 1/4" Jack

Tone Pin 1 - Pin 2 of TONE pot & Shield of shielded cable from Harp.

Tone Pin 2 - Pin 1 of TONE pot & Pin 3 of VOLUME pot.

Tone Pin 3 - The other end of the Tone Cap.

NOTE: The Tone Cap (not provided) is 0.047 microfarads with a voltage rating 200vdc or greater. This voltage rating is well in excess of that which is required, however lower voltage caps won't have long enough leads to span the gap.